


Multifit Fully Automatic Antenna to suit Commodore VT-VZ 1997-2006


Supplied Mounting Parts



1x Mounting
Insulator

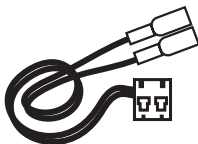

1x VT II/VY
Loom

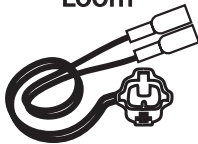

1x VY II/VZ
Loom



1x 26mm
DIA Grommet




1x 15mm
DIA Grommet



Screws x2




1x Backstrap

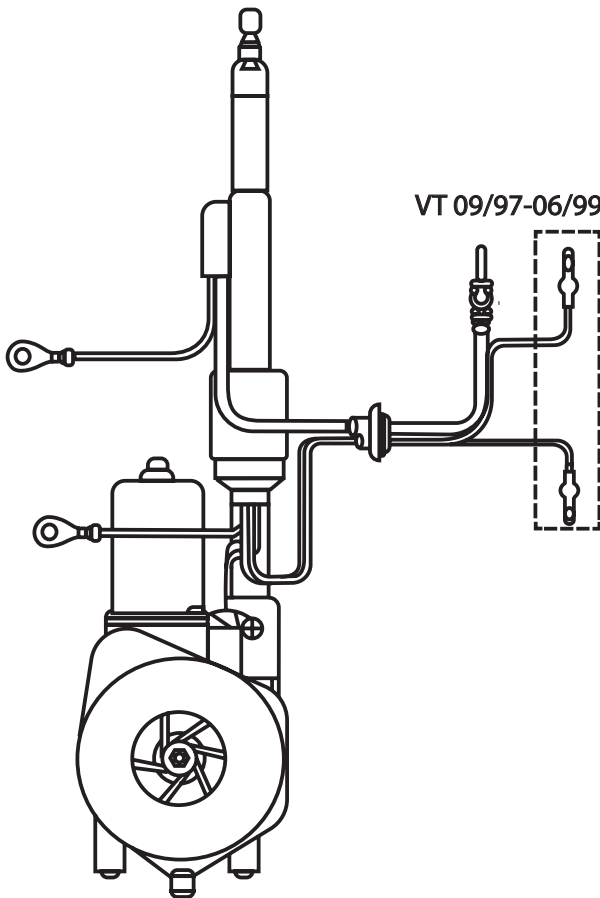

VT 09/97 - 06/99

* Vehicles with factory fitted automatic antennas may be able to utilise the factory mounting bracket in the installation of the antenna. In cases where there is a non-automatic antenna, or the factory bracket does not fit, use the supplied **Back Strap** to mount the antenna to the vehicle body.

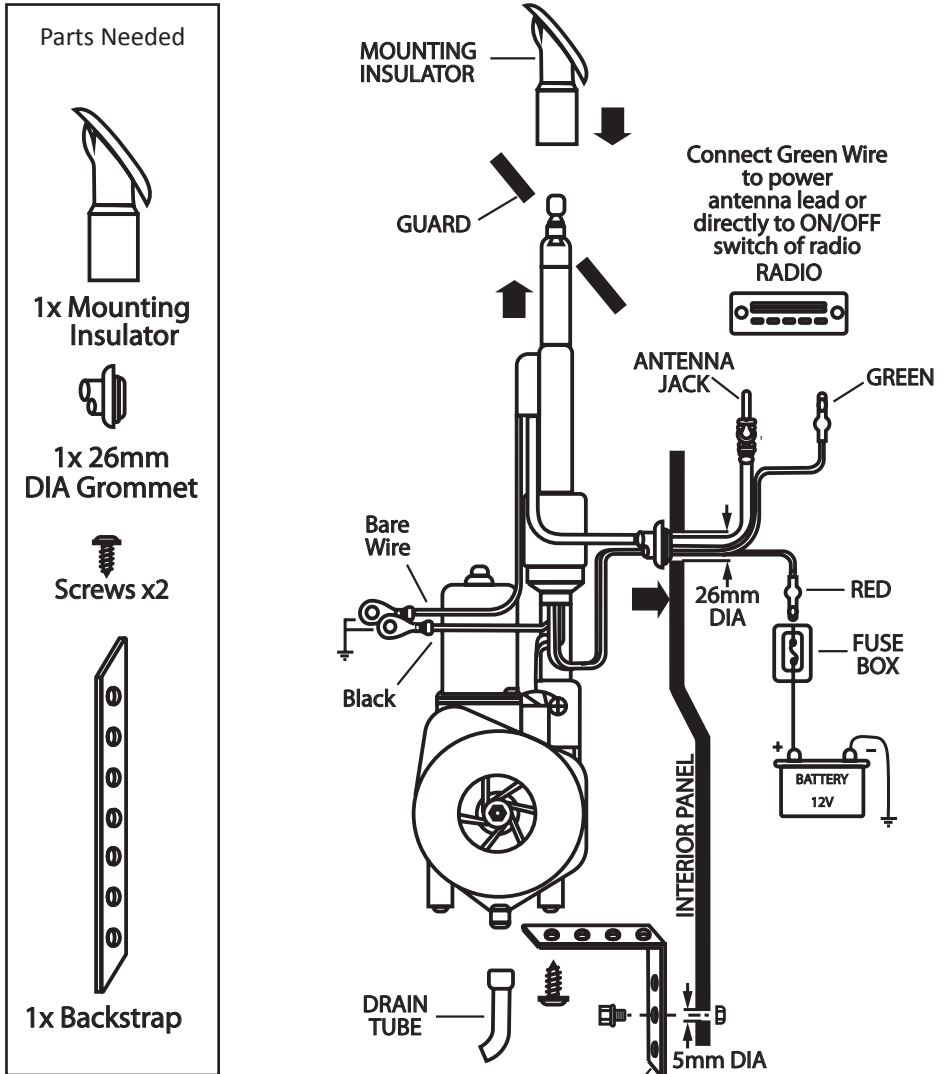


Replacing AP7

USE BACKSTRAP AS BRACKET
IF FACTORY BRACKET DOES
NOT FIT

VTII - VY 06/99 - 08/03

* Vehicles with factory fitted automatic antennas may be able to utilise the factory mounting bracket in the installation of the antenna. In cases where there is a non-automatic antenna, or the factory bracket does not fit, use the supplied **Back Strap** to mount the antenna to the vehicle body.

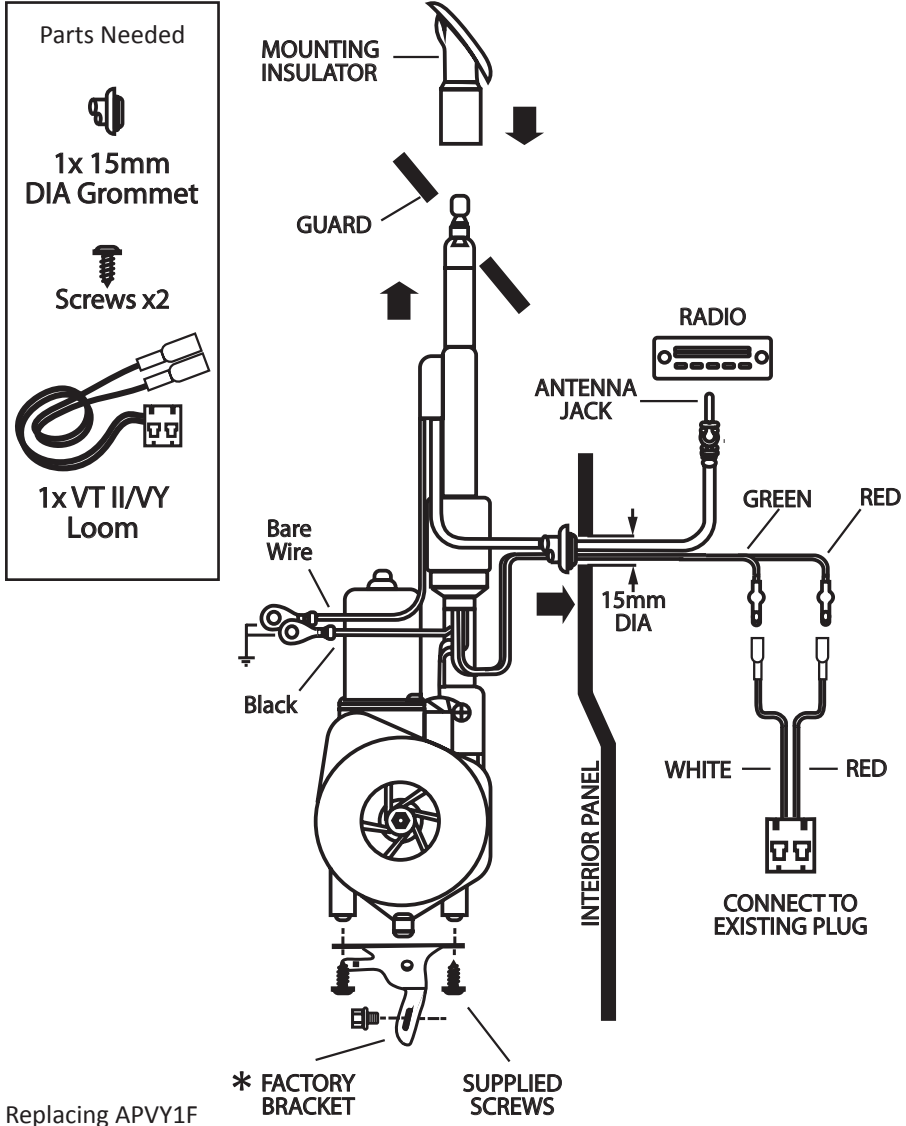

VYII 08/03 - VZ

* Vehicles with factory fitted automatic antennas may be able to utilise the factory mounting bracket in the installation of the antenna. In cases where there is a non-automatic antenna, or the factory bracket does not fit, use the supplied **Back Strap** to mount the antenna to the vehicle body.

